# PROGRAMME TABLE



Half Load Option
Spin
Cotton
Delicate
Prewash
Wool
Coloured Cotton
Drain
Synthetics
On/Off
Rinse + Spin

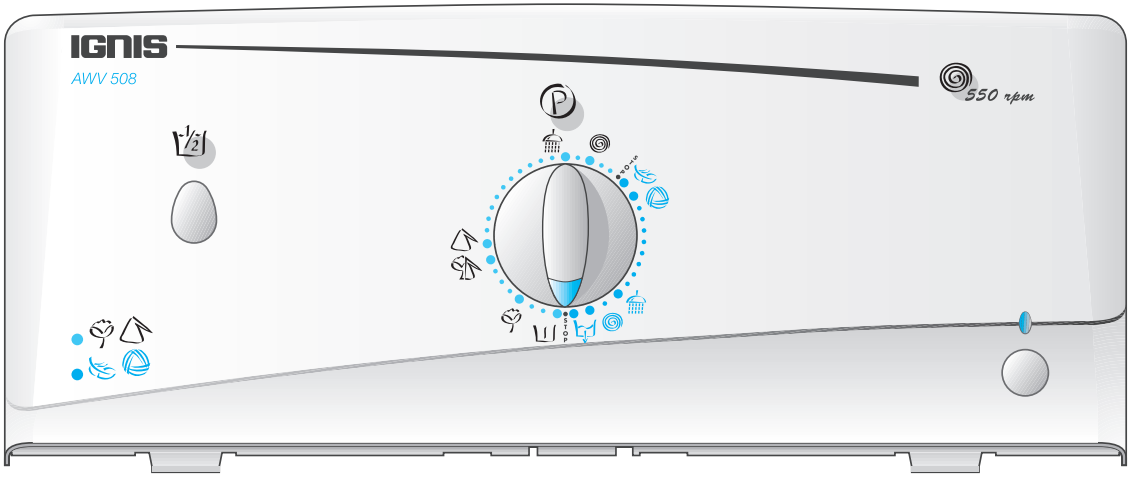


**(1)Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.**

| Programme | | Type of fabrics / Degree of soiling / Notes | Max. Load | Detergent and Additives | | | Option | Temperature | Maximum Spin Speed | Programme time approx. |
|---|---|---|---|---|---|---|---|---|---|---|
| | | | | Prewash | Washing | Softener | Half Load | | | |
| | | | kg | | | | | °C | rpm | min (1) |
| | **Cotton with Prewash** | Heavily soiled sheets, tablecloths, underclothes, shirts etc. in hard wearing and high temperature resistant cotton. The maximum load for heavily soiled washing is 3.5 kg. | 4.5 | Yes | Yes | ❊ | ❊ | 90 | 550 | 130 |
| | **Cotton** | Averagely soiled, hard wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts, etc.). | 4.5 | — | Yes | ❊ | ❊ | 90 | 550 | 115 |
| | **Coloured Cotton** | Moderately soiled sheets, tablecloths, underclothes, towels, etc. in hard wearing and temperature resistant cotton. | 4.5 | — | Yes | ❊ | ❊ | 60 | 550 | 90 |
| | **Synthetics** | Blouses, shirts, cotton blouses, dark coloured terry towelling, jeans, etc. lightly soiled. | 2.0 | — | Yes | ❊ | ❊ | 40 | 550 | 70 |
| | **Rinse + Spin** | This programme allows starch or softener to be added. It is followed by an intensive spin cycle. | 4.5 | — | — | ❊ | — | Cold | 550 | 20 |
| | **Spin** | Programme for intensive spin cycle. | 4.5 | — | — | — | — | — | 550 | 15 |
| | **Delicate** | Delicate fabrics and curtains (dresses, skirts, shirts, blouses, etc.). | 1.5 | — | Yes | ❊ | — | 40 | 550 | 55 |
| | **Wool** | Machine washable woollens with pure new wool label. | 1.0 | — | Yes | ❊ | — | 40 | 550 | 45 |
| | **Rinse + Spin** | This programme allows starch or softener to be added. It is followed by a gentle spin cycle. | 1.5 | — | — | ❊ | — | Cold | 550 | 15 |
| | **Spin** | Programme for gentle spin cycle. | 1.5 | — | — | — | — | — | 550 | 10 |
| | **Drain** | Drain only, without spin cycle. | — | — | — | — | — | — | — | 5 |

**N.B.:** **The excess of detergent in the dispenser could cause technical problems.**

| ENERGY AND WATER CONSUMPTION DATA | | | | | |
|---|---|---|---|---|---|
| **Programme** | **Temperature (°C)** | **Load (kg)** | **Water (l)** | **Energy (kWh)** | **Programme time (min)** |
| Cotton | 90 | 4.5 | 69 | 1.75 | 115 |
| Coloured Cotton | 60 | 4.5 | 69 | 0.95 | 90 |
| Synthetics | 40 | 2.0 | 66 | 0.35 | 70 |
| Delicate | 40 | 1.5 | 70 | 0.65 | 55 |
| Wool | 40 | 1.0 | 70 | 0.55 | 45 |

Programmes with prewash last about 15 minutes more than programmes without prewash. Water and energy consumption values were measured in standard conditions in compliance with the Standard IEC 60 456. Individual consumption may vary in comparison with the values specified in the table, because of differences in supply water pressure and temperature, the load and the type of wash.

## ADDING DETERGENT AND ADDITIVES

Pour the detergent and additives into the respective compartments as follows:

- Programme with pre and main wash
- Main wash programme without prewash
- Fabric softeners and starch
- Stain removers
- Anti-scale agents (water hardness 4)

**Important Note:**

- Do not fill beyond the "**MAX"** level mark.
- For programme with prewash: do not use liquid detergent.
- For programmes without prewash from cold to 40° C, it is recommended to use a liquid detergent to avoid whitish residues on the coloured laundry.

## CLOSE THE DOOR AND SELECT THE PROGRAMME

- Turn the **programme selector knob** clockwise to the desired programme.

## PRESS ANY DESIRED OPTION BUTTON(S)

**"Half Load" button**

- Reduces the water consumption in the "Cotton" and "Synthetics" programmes especially during the rinse.
- Especially suitable for lightly soiled or small loads (reduces the quantity of detergent).
- Not suitable for high temperature programmes.

## PROGRAMME START

Open the water inlet tap and press the "On/Off" button. The pilot lamp lights up.

## DOOR LOCK

During the running programme, the door cannot be opened.
The door locks automatically in all programmes.
If the programme is stopped or if an electrical power failure occurs, the door unlocks automatically after about 1 minute.

## PROGRAMME END

- The programme selector knob is at "STOP".

1. Press the "On/Off" button. The pilot light goes out.
2. Cancel the option by pressing the appropriate button.
3. Turn the water supply tap off.
4. Wait for the door to unlock (about 1 minute).
5. Open the door and the drum flaps and unload the machine.

## SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

1. Press the "On/Off" button to switch off the appliance. The pilot light goes out.
2. Select the new programme and option.
3. Press the "On/Off" button to switch on the appliance. The pilot light lights.

## TO STOP, RESET A PROGRAMME BEFORE THE END

1. Press the "On/Off" button to switch off the appliance. The pilot light goes out.
2. Set the programme selector on "Drain".
3. Press the "On/Off" button to start the "Drain" programme. Only open the door when the programme selector is at "STOP" and the door is unlocked (after approximately 1 minute).